



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Play |  | Play / Slow |
|  | Pause |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Rec |  | Rec / Rec Mode |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Lang |  | Audio / Lang / I/II |
|  | Source (Games) |  | Eject / Surround |
|  | Movie-Music-Phot |  | Picture / Format |
|  | [≡].. |  | Zoom / Size |
|  | * / O |  | Sleep / Timer |
|  | TV |  | TV/Radio / |
|  | Q.Menu |  | D.Menu / Top |
|  | [-O-] |  | Setup / OPT / |
|  | [≡]/Text |  | Text / Goto |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|-----------------------|
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | i |  | Info / Angle |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Exit |  | Exit / Cancel / Clear |
|  | Down |  | Down |
|  | Back |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | World (Violet) |  | Smart / List |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | * / Q |  | Display / Media |
|  | PR- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------|--|-----------------------------|
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | Guide | | Guide / EPG / -/-- |
| | 0 | | 0 |
| | Red | | Red / Netflix / Search |
| | Green | | Green / APP / Repeat |
| | Yellow | | Yellow / YouTube / Repeat |
| | Blue | | Blue / Prime Video / Random |
| | Recall | | Shift + Back / Return |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

