


 

 

 

 




 


 











 




 




 





 
 

 
 

 
 

 


 






Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	+10		Guide
	+100		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Set		Ok
	<<</<</Service		Left
	>>>/>>>/Service		Right
	Cancel		Shift + Back
	Clock/Timer		AV
	Display		Info
	Sleep		Sleep
	A.P.S.		Media
	Stop/PTY		Stop
	Sound Mode		Dual
	Repeat		Text
	Rec Speed		Rec
	Rec Delete		Back
	Rec Mode		Shift + Rec
	FM Mode		TV/R



