


 
 



 



 

 









 

 









 
 

 

 

 


 










Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------------|
|  | Standby |  | Power |
|  | Display |  | Info |
|  | Sleep |  | Sleep |
|  | Prog |  | Shift + Sleep |
|  | Random |  | Subt |
|  | Repeat |  | Text |
|  | Sound Mode |  | Dual |
|  | Auto Preset |  | TV/R |
|  | FM Mode |  | Blue |
|  | Eject CD |  | Pre Ch |
|  | AUX |  | Red |
|  | FM/AM |  | Green |
|  | Tape <> |  | Yellow |
|  | Play CD |  | Play |
|  | Pause CD |  | Pause |
|  | Stop |  | Stop |
|  | >> |  | >> |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|--------|
|  | I<< |  | I<< |
|  | Cancel |  | Back |
|  | < Multikey |  | Left |
|  | Multikey > |  | Right |
|  | Set |  | Menu |
|  | Display Mode |  | 3D |
|  | PTY/EON |  | Format |
|  | AHB PRO |  | AV |
|  | Vol- |  | Vol - |
|  | Vol+ |  | Vol + |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

