







 

 

 
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	ATV		Smart
	Tv/Radio		TV/R
	Tv Guide		Guide
	USB		Media
	Rec		Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Rec List		List
	AV/Source		AV
	i/Info		Info












 

 







 







 

 


Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0








 

 




Originalfernbedienung Ersatzfernbedienung

	Back		Back
	FAV		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Subtitle		Subt
	Aspect		3D
	Audio		Dual
	Sleep		Sleep
	CH+		Ch +
	CH-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	Index		Options
	Reveal		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Power/Display		Shift + Power
	P.Mode		Shift + Format
	Size		Format
	Hold/Lang		Shift + Dual
	S.Mode		Eject

