 
 
 




 






 
 



Originalfernbedienung Ersatzfernbedienung

	On		Power
	Off		Shift + Power
	P.Mode		Format
	S.Mode		Dual
	Clock Display		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Still		Pause
	Zoom		Eject

 
 
 

 
 

 

 


 
 

 

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	CH +		Ch +
	CH -		Ch -
	Source		AV
	Menu		Menu
	Timer		Shift + AV
	Info		Info
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red / Auto		Red
	Green / S.Effect		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow / P.Size		Yellow
	Blue / MDC		Blue
	PIP On		Media
	Size		3D
	Locate		Text
	Source 2		Options
	Swap		Back
	S.Sel		Sleep
	+100		Guide

Originalfernbedienung Ersatzfernbedienung

