




 
 


 

 

 
 


 

 



 






 
 






**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Audio		Dual
	TV / STB		Shift + TV/R
	TV / R		TV/R
	Sleep		Sleep
	SUB		Subt
	TXT		Text
	P / N		Shift + 1
	Recall		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7


 
**Originalfernbedienung    Ersatzfernbedienung**

	8		8
	9		9
	0		0
	PGUP		Vol +
	PGDN		Vol -
	SAT		Shift + AV
	FAV +		Ch +
	FAV -		Ch -
	EPG		Guide
	Fav		Shift + Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Menu		Menu
	Exit		Exit
















Originalfernbedienung   Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Pause		Pause
	Zoom		Eject
	Edit		Format
	Info		Info
	USB		AV
	MP3		Media
	JPEG		Smart
	PVR List		List
	A - B		Back
	T.S.		Shift + 2
	Goto		Options
	Stop		Stop
	Rec		Rec

Originalfernbedienung   Ersatzfernbedienung

	<<		<<
	>>		>>
	Play / Pause		Play
	> <		Shift + Pause
	<<		<<
	>>		>>

