
 
 
 




 

 


 


 
 
 
 
 

 


 
 
 


 
 

 




Originalfernbedienung	Ersatzfernbedienung
 Power	 Power
 Open/Close	 Eject
 Repeat	 Text
 Disc Menu	 D. Menu
 Video Sel	 AV
 >>	 >>
 USB	 Media
 Marker	 Pre Ch
 <<	 <<
 Repeat A-B	 TV/R
 Play/Pause	 Play
 Stop	 Stop
 >>	 >>
 <<	 <<
 Menu	 Menu
 Return	 Back
 Info	 Info

Originalfernbedienung	Ersatzfernbedienung
 Up	 Up
 Subtitle	 Subt
 Down	 Down
 Left	 Left
 Audio	 Dual
 Right	 Right
 Tools	 Options
 Enter	 Ok
 Title Menu	 Smart

