


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Red/Zoom |  | Red |
|  | Green/00 |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Text |  | Text |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------------|
|  | Picture |  | Format |
|  | AV |  | AV |
|  | Menu |  | Menu |
|  | PR+ |  | Ch + |
|  | Up |  | Up |
|  | PR- |  | Ch - |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Left |  | Left |
|  | Up VCR |  | Shift + Ch - |
|  | UP [=] |  | Shift + Text |
|  | Up DVD |  | Shift + Up |
|  | Down VCR |  | Shift + Ch + |
|  | Down DVD |  | Shift + Down |
|  | << VCR |  | Shift + << |

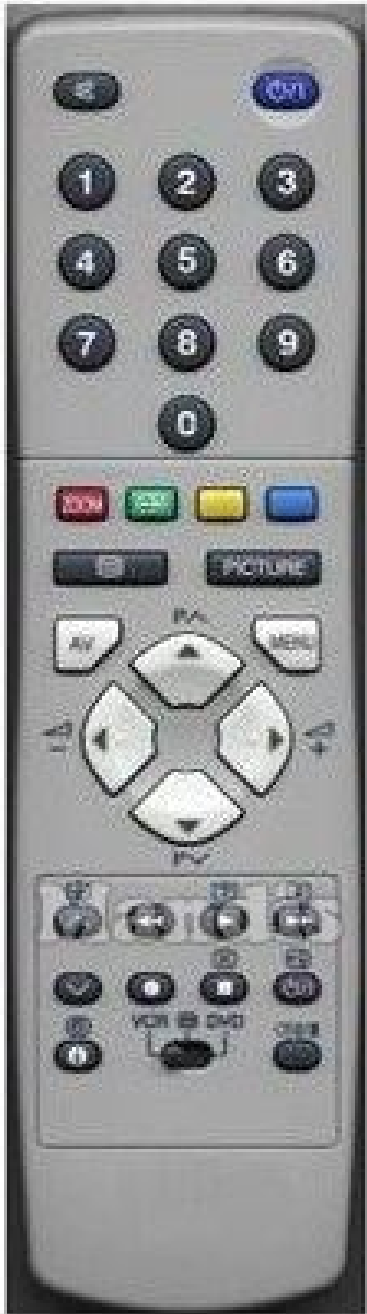


Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|------------------|---|---------------|
| | << DVD | | << |
| | Play/[?] VCR | + | Shift + Play |
| | Play/[?] [≡] | | Eject |
| | Play/[?] DVD | | Play |
| | >>/[+] VCR | + | Shift + >> |
| | >>/[+] [≡] | + | Shift + Right |
| | >>/[+] DVD | | >> |
| | Rec VCR | + | Shift + Rec |
| | Stop/[X] VCR | + | Shift + Stop |
| | Stop/[X] [≡] | | Exit |
| | Stop/[X] DVD | | Stop |
| | Standby/[≡i] VCR | + | Shift + Power |
| | Standby/[≡i] [≡] | | Media |
| | Standby/[≡i] DVD | | Smart |
| | i/Timer | | Info |
| | O)) / | | Dual |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

