



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Program		TV/Radio /
	Cancel		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	Disc		Fav / Marker / PC
	4		4
	5		5
	6		6
	>=10 / -/--		Guide / EPG / -/--
	7		7
	8		8
	9		9
	0		0
	Test		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	Pro Logic		Audio / Lang I/II
	Super SRND		Eject / Surround
	Super 3D AI EQ		Menu / Home
	Up		Up
	Left		Left
	EQ		Subtitle / EQ
	EQ		OK
	Right		Right
	CH Select		Smart / List
	Down		Down
	AV Effect		AV / Input / RDS
	Super Sound EQ		Sound / Title
	Digital S. Woofer		Setup / OPT /
	VCR / AUX / 6CH Input		Shift + 7
	VCR / AUX / 6CH Input		Shift + 4
	VCR / AUX / 6CH Input		Red / Netflix / Search
	TAPE / Deck 1/2		Shift + 5



