



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------|---|--------|
|  | Power |  | Power |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0/FAV |  | 0 |
|  | AV |  | AV |
|  | Mute |  | Mute |
|  | List |  | List |
|  | Exit |  | Exit |
|  | i |  | Info |
|  | Swap |  | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|---------|
|  | Up |  | Up |
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Red/PVR |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | EPG |  | Guide |
|  | TXT |  | Text |
|  | Option |  | Options |
|  | << |  | << |
|  | Play |  | Play |
|  | >> |  | >> |
|  | Skip R |  | I<< |
|  | Pause/Timeshift |  | Pause |



