
 





 
 


 











 
 
 





 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Menu		Menu
	?		Info
	P+		Ch +
	P-		Ch -

**Originalfernbedienung Ersatzfernbedienung**

	Vol+		Vol +
	Vol-		Vol -
	Red/↑/List		Red
	Green/Subtitle		Green
	Yellow/><		Yellow
	Blue/FAV		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Guide		Guide
	Lang		Dual
	Pause		Pause
	P<P		Pre Ch
	TXT		Text

