


 

 

 

 















 







 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	POWER		Power
	SCREEN SIZE		3D
	AUTO SET UP		Options
	MUTE		Mute
	ZOOM		Eject
	PC 1		Shift + 1
	PC 2		Shift + 2
	DISPLAY		Info
	TV		TV/R
	SCART		AV
	DVI		Shift + 3
	PLASMA MENU		D. Menu
	PLASMA MENU		Shift + D. Menu
	UP / CH +		Up
	UP / CH +		Ch +
	DOWN / CH -		Down
	DOWN / CH -		Ch -
	RIGHT		Right
	LEFT		Left
	SET		Ok
	VOL +		Vol +
	VOL -		Vol -
	MENU TV		Menu
	PIP ON / OFF TV		Media
	PIP SWAP TV		I<<
	PIP MOVE TV		>>I
	PIP TYPE TV		Shift + Media
	AUDIO TV		Dual
	CLOCK TV		Sleep
	1 TV		1
	2 TV		2
	3 TV		3
	4 TV		4
	5 TV		5





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	6 TV		6
	7 TV		7
	8 TV		8
	9 TV		9
	0 TV		0
	TV / TEXT / MIX		Text
	LIST TV		Smart
	ZOOM TV		Shift + Eject
	HOLD TV		Stop
	REVEAL TV		Format
	INDEX TV		Pause
	EXPAND TV		Exit
	RED TV		Red
	GREEN TV		Green
	YELLOW TV		Yellow
	BLUE TV /		Blue
	BLUE TV /		Subt



SUBTITLES