



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | PgUp |  | Ch + |
|  | PgDn |  | Ch - |
|  | FAV+ |  | >>I |
|  | FAV- |  | I<< |
|  | Up/CH+ |  | Up |

 


 
 

 

 

 
 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|--------|
|  | Down/CH- |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Menu |  | Menu |
|  | Exit |  | Exit |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | EPG |  | Guide |
|  | Audio |  | Dual |
|  | SUB |  | Subt |
|  | Zoom |  | Eject |
|  | FAV |  | Pre Ch |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|-------|
|  | List |  | List |
|  | Pause |  | Pause |
|  | TXT |  | Text |
|  | Info |  | Info |
|  | Tv/Radio |  | TV/R |
|  | Recall |  | Back |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

