



Originalfernbedienung	Ersatzfernbedienung
Power	Power
Open/Close	Eject
Repeat	Text
Disc Menu	D. Menu
Video Sel	AV
>>	>>
USB	Media
Marker	Pre Ch
<<	<<
Repeat A-B	TV/R
Play/Pause	Play
Stop	Stop
>>	>>
<<	<<
Menu	Menu
Return	Back
Info	Info

Originalfernbedienung	Ersatzfernbedienung
Up	Up
Subtitle	Subt
Down	Down
Left	Left
Audio	Dual
Right	Right
Tools	Options
Enter	Ok
Title Menu	Smart

