





































Originalfernbedienung Ersatzfernbedienung

	DVD		Shift + 2
	Tuner		Shift + 6
	Port		Shift + 3
	Aux		Shift + 7
	Power		Power
	Open / Close		Eject / Surround
	TV / Video		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Remain		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

	0		0
	Cancel		Shift + Exit / Cancel / Clear
	I<<		I<< / Preset-
	Step		Shift + Pause / Step /
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	<<		<< / Tune-
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	Volume +		Vol+
	Mute		Mute / Dimmer
	Tuning + / CH +		CH+ / Page+
	Volume -		Vol-
	Tuning - / CH -		CH- / Page-
	Menu		Menu / Home
	Return		Back / Return



