
 





 


 


 





Original	Replacement	Original	Replacement
 Tv	 TV/Radio /	 Recall	 Shift + Back / Return
 Power	 Power	 Red	 Red / Netflix / Search
 World	 Smart / List	 Green	 Green / APP / Repeat
 [=]/Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer	 Blue	 Blue / Prime Video / Random
 Music/Movie/Phot	 Sound / Title	 Vol+	 Vol+
 1	 1	 Mute	 Mute / Dimmer
 2	 2	 PR+	 CH+ / Page+
 3	 3	 Vol-	 Vol-
 4	 4	 i	 Info / Angle
 5	 5	 PR-	 CH- / Page-
 6	 6	 Menu	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Q.Menu	 D.Menu / Top
 9	 9	 Left	 Left
 Source/Games	 AV / Input / RDS	 OK	 OK
 0	 0	 Right	 Right





Original		Replacement		Original	Replacement
	Back		Back / Return		
	Down		Down		
	Exit		Exit / Cancel / Clear		
	[≡]..		Setup / OPT /		
	Lang		Audio / Lang I/II		
	O/*		Zoom / Size		
	Q./*		Picture / Format		
	Play		Play / Slow		
	Stop		Stop / Hold		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Pause		Pause / Step / Freeze		
	Rec		Rec / Rec Mode		
	Guide		Guide / EPG / -/--		
	[-O-]		Display / Media		

