 



 

 

 









 























 



 



 

 



 

 

 

 









Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 Play/Pause	 Play / Slow	 Right	 Right
 Stop	 Stop / Hold	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 Down	 Down
 <</REW	 << / Tune-	 Recall	 Back / Return
 >>/FF	 >> / Tune+	 Vol+	 Vol+
 I<</Prev	 I<< / Preset-	 Page Up	 CH+ / Page+
 >>I/Next	 >>I / Preset+	 Vol-	 Vol-
 Audio	 Audio / Lang I/II	 Page Dn	 CH- / Page-
 Subtitle	 Subtitle / EQ	 1	 1
 Tv/Radio/MMB	 TV/Radio /	 2	 2
 Setup	 Setup / OPT /	 3	 3
 TTX	 Text / Goto	 4	 4
 Menu	 Menu / Home	 5	 5
 Up	 Up	 6	 6
 Info	 Info / Angle	 7	 7





Original	Replacement
	8
	9
	Guide / EPG / -/--
	0
	Fav / Marker / PC
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	+  Shift + Guide / EPG / -/--

Original	Replacement

