




 



 

 

 
 


 

 








 




 

 







 



 







 
















Original	Replacement	Original	Replacement
 Standby/On	 Power	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Set	 Ok
 3	 3	 <</<</Service	 Left
 4	 4	 >>/>> /Service	 Right
 5	 5	 Cancel	 Shift + Back
 6	 6	 Clock/Timer	 AV
 7	 7	 Display	 Info
 8	 8	 Sleep	 Sleep
 9	 9	 A.P.S.	 Media
 10	 0	 Stop/PTY	 Stop
 +10	 Guide	 Sound Mode	 Dual
 +100	 Pre Ch	 Repeat	 Text
 Vol+	 Vol +	 Rec Speed	 Rec
 Vol-	 Vol -	 Rec Delete	 Back
 Mute	 Mute	 Rec Mode	 Shift + Rec
 Menu	 Menu	 FM Mode	 TV/R





Original	Replacement	Original	Replacement
 Play Mode	 Format		
 Tuner	 Subt		
 Super Woofer	 Ch +		
 Super Woofer Vol-	 Ch -		
 Distorsion Level +	 >>		
 Distorsion Level -	 <<		
 Play/Pause USB	 Red		
 Play/Pause CD	 Play		
 Play/Pause iPod	 Pause		
 Play/Pause Metronome	 Green		
 Play/Pause Bluetooth	 Yellow		
 Audio In	 Blue		

