


 

 
 







Original	Replacement
 SOURCE	 RDS AV INPUT AV / Input / RDS
 Power	 Power
 1	 TV 1
 2	 DVD 2
 3	 CD - STB 3
 4	 VIDEO 4
 5	 TAPE 5
 6	 TUNER 6
 7	 AUX - HDD 7
 8	 USB 8
 9	 BLUETOOTH 9
 EPG	 --/-- GUIDE EPG Guide / EPG / --/--
 0	 HDMI - SAT 0
 PRE-CH	 RETURN BACK Back / Return
 HDMI	 SHIFT + HDMI - SAT 0 Shift + 0
 YPbPr	 OPT-TOOLS SETUP Setup / OPT /
 VIDEO	 SHIFT + VIDEO 4 Shift + 4

Original	Replacement
 PC	 SHIFT + PC FAV MARKER Shift + Fav / Marker / PC
 CH+ Vol	 CH+ CH PAGE CH+ / Page+
 Mute	 DIMMER MUTE Mute / Dimmer
 Vol+ CH	 VOL+ VOL Vol+
 Vol- CH	 VOL- VOL Vol-
 Zoom	 SIZE ZOOM Zoom / Size
 CH- CH	 CH- CH PAGE CH- / Page-
 Dual	 LANG I/II AUDIO Audio / Lang I/II
 ADJ Audio	 TITLE SOUND Sound / Title
 ADJ Video	 FORMAT PICTURE Picture / Format
 Sleep	 TIMER SLEEP Sleep / Timer
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu/Exit	 HOME MENU Menu / Home
 Menu/Exit	 CLEAR EXIT CANCEL Exit / Cancel / Clear





Original	Replacement	Original	Replacement
	Down		Freeze
	Info		Pause / Step / Freeze
	Red		
	Green		
	Yellow		
	Blue		
	Teletext		
	Mix		
	Size		
	Subpage		
	Index		
	Subtitle		
	Hold		
	Reveal		
	FAV		
	CH-List		
	AD		
	Down		
	Info / Angle		
	Red / Netflix / Search		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	Text / Goto		
	Shift + Text /		
	Shift + Zoom /		
	>> / Tune+		
	Play / Slow		
	Subtitle / EQ		
	Stop / Hold		
	<< / Tune-		
	Fav / Marker / PC		
	Smart / List		
	Shift + Audio / Lang I/II		

