





 
































Original	Replacement
 Power	 Power
 EPG	 Guide / EPG / -/--
 Teletext	 Text / Goto
 Select	 Smart / List
 Confirm	 D.Menu / Top
 Title	 Sound / Title
 Eject	 Eject / Surround
 Menu	 Menu / Home
 Option	 Shift + Setup / OPT / Tools
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Zoom	 Zoom / Size
 0	 0
 Goto	 Shift + Text /
 i/Display	 Display / Media
 Guide	 Shift + Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Rec	 Rec / Rec Mode
 Down	 Down
 Return	 Back / Return
 Vol-	 Vol-
 Vol+	 Vol+
 <<	 << / Tune-
 Stop	 Stop / Hold





Original		Replacement	
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	I>/Slow		Info / Angle
	Pasue/Step		Pause / Step / Freeze
	>>I		>>I / Preset+
	Source		AV / Input / RDS
	Time Shift		Picture / Format
	Repeat	+	Shift + Green / APP / REPEAT
	aA/Subtitle		Subtitle / EQ
	Setup		Setup / OPT /
	Red		Red / Netflix / Search
	Tv System		TV/Radio /
	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	Mute		Mute / Dimmer

Original		Replacement	
	Blue		Blue / Prime Video / Random

