






 
 

 


 


 

























 



 














	Original	Replacement		Original	Replacement
	Power		Power		Listen Mode
	Open/Close		Eject		Guide
	CD/DVD		Red		Subt
	Tuner/Bnad		Green		Back
	Video 1/2		Yellow		Options
	1		1		Info
	2		2		Menu
	3		3		Top Menu
	4		4		Shift + Menu
	5		5		Up
	6		6		Down
	7		7		Right
	8		8		Left
	9		9		Enter
	0		0		Ok
	Sleep		Sleep		Preset Up
	Audio		Dual		Preset Down
					Vol+
					Vol-
					Mute





Original		Replacement	
	Slow I>		>>
	<I Slow		<<
	>>I		>>I
	I<<		I<<
	Stop		Stop
	Pause		Pause
	Play		Play
	P.Mode		Format
	Clear		Exit
	Repeat		Text
	A-B		3D
	Marker		Blue
	Search		Shift + TV/R
	Angle		List
	Zoom		Shift + Eject
	RDS		Pre Ch
	PTY		TV/R

Original		Replacement	
	PTY Search		Media
	Dimmer		Smart

