



Original		Replacement		Original		Replacement	
	Standby		Power		CH+		CH+ / Page+
	Mute		Mute / Dimmer		Vol-		Vol-
	1		1		Zoom/Aspect		Shift + Zoom /
	2		2		Zoom/Aspect		Picture / Format
	3		3		CH-		CH- / Page-
	4		4		Menu		Menu / Home
	5		5		Up		Up
	6		6		Exit		Exit / Cancel / Clear
	7		7		Left		Left
	8		8		OK/Enter		OK
	9		9		Right		Right
	Recall		Back / Return		Sleep		Sleep / Timer
	0		0		Down		Down
	List		Smart / List		Source		AV / Input / RDS
	Vol+		Vol+		Red		Red / Netflix / Search
	Info/Display		Display / Media		Green		Green / APP / Repeat
	Info/Display		Info / Angle		Yellow		Yellow / YouTube / Repeat





Original	Replacement
Blue	Blue / Prime Video / Random
TTX	Text / Goto
Index	D.Menu / Top
Hold	+ Shift + Stop /
I/II/Audio	Audio / Lang I/II
Repeat/Rec	Rec / Rec Mode
Repeat/Rec	+ Shift + Green / APP /
Stop/Reveal	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Size	Zoom / Size
Subtitle	Subtitle / EQ
<</Subpage	<< / Tune-
>>	>> / Tune+
Tv/Radio	TV/Radio /
I<<	I<< / Preset-
EPG	Guide / EPG / -/--

Original	Replacement
>>I	>>I / Preset+
FAV	Fav / Marker / PC

