







 










 















 


































Original	Replacement	Original	Replacement
 Standby	 Power	 D.Menu/Index	 D.Menu / Top
 Mute	 Mute / Dimmer	 Goto/Subpage	 Text / Goto
 Play	 Play / Slow	 Source	 AV / Input / RDS
 Pause	 Pause / Step / Freeze	 Menu	 Menu / Home
 Stop	 Stop / Hold	 Up	 Up
 Rec	 Rec / Rec Mode	 Angle/Text	 Info / Angle
 <<	 << / Tune-	 Left	 Left
 >>	 >> / Tune+	 OK	 OK
 I<<	 I<< / Preset-	 Right	 Right
 >>I	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Down	 Down
 Audio/Tv/Radio	 Audio / Lang I/II	 Recall	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Eject/Auto	 Eject / Surround	 CH+	 CH+ / Page+
 P.Mode	 Picture / Format	 Vol-	 Vol-
 Zoom/Hold	 Zoom / Size	 Display	 Display / Media
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-





Original	Replacement
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
EPG	Guide / EPG / -/--
0	0
FAV-	Fav / Marker / PC
Red / Del / Prog	Red / Netflix / Search
Green / Rename	Green / APP / Repeat
Yellow / Move / Repeat	Yellow / YouTube / Repeat
Blue / Skip / A-B	Blue / Prime Video / Random
I>/Lang	Shift + >>1 / Preset+

Original	Replacement
Nicam	Shift + Sound / Title
Audio/Tv/Radio	Shift + Audio / Lang I/II
Aspect	Shift + Picture / Format
Title/Size	Shift + Zoom /
D.Disp/Reveal	Shift + D.Menu / Top Menu
I>/Lang	Shift + Right
DVD Setup	Shift + 2
FAV+	Shift + 9
-/--	Shift + Guide / EPG / -/--
FAV-	Shift + Fav / Marker / PC

