



Original	Replacement
Power	Power
Mute	Mute / Dimmer
Play	Play / Slow
Pause [/≡]	Pause / Step / Freeze
Stop/[≡+]	Stop / Hold
Rec/[≡◆]	Rec / Rec Mode
<</[≡o]	<< / Tune-
<</[≡i]	<< / Preset-
>> /[≡?]	>> / Preset+
>>/[≡x]	>> / Tune+
Info	Info / Angle
O)/II/Audio	Audio / Lang I/II
[≡]	Text / Goto
←/<x]	Shift + Left
1	1
2	2
3	3

Original	Replacement
4	4
5	5
6	6
7	7
8	8
9	9
*	Setup / OPT /
0	0
[→]	Shift + Right
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Netflix	Shift + Red / Netflix /
YouTube	Shift + Yellow / YouTube /
Vol+	Vol+





Original	Replacement
Home/Source	Menu / Home
P+	CH+ / Page+
Vol-	Vol-
P-	CH- / Page-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
EPG	Guide / EPG / -/--
List	Smart / List
Q.Menu	D.Menu / Top

Original	Replacement





Original	Replacement	Original	Replacement
Power	Power	4	4
Mute	Mute / Dimmer	5	5
Play	Play / Slow	6	6
Pause/[≡]	Pause / Step / Freeze	7	7
Stop/[≡+]	Stop / Hold	8	8
Rec/[≡◆]	Rec / Rec Mode	9	9
<</[≡o]	<< / Tune-	*	Setup / OPT /
<</[≡i]	<< / Preset-	0	0
>> /[≡?]	>> / Preset+	[→]	Shift + Right
>> /[≡x]	>> / Tune+	Up	Up
Info	Info / Angle	Left	Left
OI/II/Audio	Audio / Lang I/II	OK	OK
[≡]	Text / Goto	Right	Right
←/<x]	Shift + Left	Down	Down
1	1	Netflix	Shift + Red / Netflix /
2	2	You Tube	Shift + Yellow / YouTube /
3	3	Vol+	Vol+

Original	Replacement	Original	Replacement
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - MOD	7
8	8	USB	8
9	9	BLUETOOTH	9
*	Setup / OPT /	HDMI - BAT	0
0	0	SHIFT +	Shift + Right
Up	Up	Left	Left
Left	Left	OK	OK
Right	Right	Right	Right
Down	Down	Down	Down
Netflix	Shift + Red / Netflix /	You Tube	Shift + Yellow / YouTube /
Vol+	Vol+		





Original		Replacement		Original	Replacement
	Home / Source		Menu / Home		
	P+		CH+ / Page+		
	Vol-		Vol-		
	P-		CH- / Page-		
	Red		Red / Netflix / Search		
	Green		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	EPG		Guide / EPG / -/--		
	List		Smart / List		
	Q.Menu		D.Menu / Top		

