






















 






Original	Replacement
 Power	 Power
 V-Mode	 D.Menu / Top
 Mute	 Mute / Dimmer
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 7	 7

Original	Replacement
 8	 8
 9	 9
 Page +	 Shift + CH+ /
 TV / Radio	 TV/Radio /
 0	 0
 <-- PR	 Back / Return
 Page -	 Shift + CH- /
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK / List	 Smart / List
 OK / List	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
Down / PR -	CH- / Page-
Down / PR -	Down





Original		Replacement	
MENU	Menu	HOME MENU	Menu / Home
EXIT	Exit	CLEAR EXIT CANCEL	Exit / Cancel / Clear
INFO	Info	ANGLE INFO	Info / Angle
EPG	EPG	GUIDE EPG	Guide / EPG / -/--
FIND	Red / Find	NETFLIX SEARCH	Red / Netflix / Search
FORMAT	Green / V-Format	FORMAT PICTURE	Picture / Format
FORMAT	Green / V-Format	APP REPEAT	Green / APP / Repeat
TXT	Yellow / TXT	GOTO TEXT	Text / Goto
TXT	Yellow / TXT	YouTube REPEAT A-B	Yellow / YouTube / Repeat
AUDIO	Blue / Audio	LANG I/II AUDIO	Audio / Lang I/II
AUDIO	Blue / Audio	Prime Video RANDOM	Blue / Prime Video / Random
RECORD	Record	REC MODE	Rec / Rec Mode
PLAY	Play	SLOW	Play / Slow
STOP	Stop	HOLD	Stop / Hold
SHIFT	Shift	OPT-TOOLS SETUP	Setup / OPT /
FAST	<< Fast	TUNE-	<< / Tune-
FAST	>> Fast	TUNE+	>> / Tune+

Original		Replacement	
< SLOW	< Slow	PRESET-	I<< / Preset-
> SLOW	> Slow	PRESET+	>>I / Preset+

