

 
 
 


 
 









 



 

 

 
 
 


 




 
 

 





 
 
 
 



 









 
 

 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	PREMIUM NET		Smart
	Guida		Guide
	Menu		Menu
	Info		Info
	Vol +		Vol +
	Vol -		Vol -
	P +		Ch +
	P -		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Back		Back
	Exit / Stop		Exit
	Exit / Stop		Stop
	<< REW		<<
	>> FWD		>>
	Pause / Play		Play
	Pause / Play		Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original		Replacement		Original		Replacement	
	0		0				
	Lista		List				
	Opzioni		Options				
	Text		Text				
	TV / Rad		TV/R				
	APP		Shift + Media				
	Source		AV				
	I<< Prev		I<<				
	Rec		Rec				
	File		Media				
	>>I Next		>>I				

