


 






 


 


 
 
 

 

 









 





Original	Replacement
 Power	 Power
 PN/Audio	 Dual
 DVD/USB	 Smart
 Eject	 Eject
 Prog	 Sleep
 Search	 TV/R
 Subtitle	 Subt
 Angle	 Back
 Zoom	 Shift + Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 10+	 Guide
 Setup	 Options
 V-Mode	 Format
 OSD	 3D
 Repeat	 Text
 Title	 Info
 PBC/Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stop	 Stop
 Play	 Play
 Pause	 Pause





	Original	Replacement	Original	Replacement
	>>		>>	
	<<		<<	
	>>		>>	
	<<		<<	
	Vol+		Vol +	
	Vol-		Vol -	
	Mute		Mute	

