



Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Tv/AV		AV / Input / RDS		Zoom		Zoom / Size
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/Select		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		Red / Picture		Red / Netflix / Search
	-/--		Shift + Guide / EPG / -/--		Red / Picture		Picture / Format
	0		0		Green / Sound		Green / APP / Repeat
	Back		Back / Return		Green / Sound		Sound / Title
	Vol+		Vol+		Yellow / Sleep		Yellow / YouTube / Repeat
	Scan		Smart / List		Yellow / Sleep		Sleep / Timer
	P+		CH+ / Page+		Blue / Call		Blue / Prime Video / Random





Original		Replacement		Original	Replacement
TEXT	Text	GOTO TEXT	Text / Goto		
MIX	Mix	SHIFT + GOTO TEXT	Shift + Text /		
SIZE	Size	SHIFT + SIZE ZOOM	Shift + Zoom /		
INDEX	Index	REC MODE	Rec / Rec Mode		
HOLD	Hold	HOLD	Stop / Hold		
REVEAL	Reveal	SLOW	Play / Slow		
SUBPAGE	Subpage	EQ SUBTITLE	Subtitle / EQ		
CANCEL	Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear		
DVB MENU	DVB Menu	TOP MENU D.MENU	D.Menu / Top		
i	i	ANGLE INFO	Info / Angle		
EPG	EPG	GUIDE EPG	Guide / EPG / -/--		
ESC	ESC	PC FAV MARKER	Fav / Marker / PC		
DVB	DVB	MEDIA DISPLAY	Display / Media		
FREEZE	Freeze	STEP - FREEZE II	Pause / Step / Freeze		
I/II	I/II	LANG I/II AUDIO	Audio / Lang I/II		

