 
 



 
 
 

 
 
 

 




Original	Replacement
 POWER	 Power
 MENU / EXIT	 Menu
 UP / KEYSTONE	 Up
 DOWN / KEYST.	 Down
 RIGHT / LOCK	 Right
 LEFT	 Left
 PLAY / PAUSE	 Shift + Play / Play
 SOURCE	 Source
 BLANK	 Blank / Mute
 VOLUME+	 Vol + / Page +
 VOLUME-	 Vol - / Page -
 TIMER ON	 Volt / Focus
 PAGE DOWN	 Shift + Vol - / Page -
 PAGE UP	 Shift + Vol + / Page +
 DIGITAL ZOOM -	 - / Stop
 DIGITAL ZOOM	 + / Play
 KEYSTON	 Shift + Down

Original	Replacement
 ENTER / MODE	 Enter
 KEYSTON UP	 Shift + Up
 PRESET	 Freeze / Timer
 AUTO	 Auto
 ASPECT	 Eco / Aspect
 TIMER SET UP	 Mode
 CAPTURE	 Comp / Video



DOWN