 










 

 

 

 

 


 


 



 











 
 
 

 
 



 



 




 




 







Original		Replacement		Original		Replacement	
	Power		Power		Prog+		Ch +
	1		1		Prog-		Ch -
	2		2		Menu		Menu
	3		3		List		List
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		Ok
	9		9		Right		Right
	0		0		Down		Down
	EPG		Guide		Red / Timer		Red
	Info		Info		Red / Timer		AV
	Vol+		Vol +		Green / FAV		Green
	Vol-		Vol -		Green / FAV		Pre Ch
	Mute		Mute		Yellow / Repeat		Yellow
	TV / Radio		TV/R		Blue / Goto		Blue



