











 

 






 






 



 
 






Original	Replacement	Original	Replacement
 Power	 Power	 I<<	 I<< / Preset-
 Control	 Setup / OPT /	 Stop	 Stop / Hold
 [i+]	 Info / Angle	 >>I	 >>I / Preset+
 P.Info	 Smart / List	 1	 1
 ATV	 Shift + Smart / List	 2	 2
 DTV	 Shift + Display / Media	 3	 3
 SAT	 Shift + 0	 4	 4
 Radio	 TV/Radio /	 5	 5
 Power Ext. Media	 Shift + Power	 6	 6
 ←	 Shift + Left	 7	 7
 Pause	 Pause / Step / Freeze	 8	 8
 →	 Shift + Right	 9	 9
 Rec	 Rec / Rec Mode	 Recall	 Fav / Marker / PC
 <<	 << / Tune-	 0	 0
 Play	 Play / Slow	 Source	 AV / Input / RDS
 >>	 >> / Tune+	 I/II/I+II/▼/O	 Audio / Lang I/II
 Rec Stop	 Shift + Stop / Hold	 [<>]	 Picture / Format

Hold





Original	Replacement
AV Mode	Shift + AV / Input / RDS
Eco	Display / Media
Mute	Mute / Dimmer
Vol+	Vol+
P+	CH+ / Page+
[≡]	Text / Goto
Vol-	Vol-
P-	CH- / Page-
Home	Menu / Home
EPG	Guide / EPG / -/--
Nothing	Eject / Surround
Up	Up
Left	Left
OK	OK
Right	Right
End	Exit / Cancel / Clear
Down	Down

Original	Replacement
Back	Back / Return
[...]	Subtitle / EQ
[≡?]	D.Menu / Top
[≡o]	Sleep / Timer
[≡◇]	Zoom / Size
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

