



Original	Replacement
TV Mute	Mute / Dimmer
Output Select	Smart / List
Tv/Video	AV / Input / RDS
Standby/On	Power
DV	Text / Goto
HDD	Shift + 7
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Replacement
Tv Vol+	Vol+
Tv Vol-	Vol-
PR/CH/Input	CH+ / Page+
PR/CH/Input	CH- / Page-
Cancel	Exit / Cancel / Clear
Memo/Mark	Eject / Surround
F1	Yellow / YouTube / Repeat
F2	Blue / Prime Video / Random
Edit	Sleep / Timer
Prog	TV/Radio /
Top Menu	D.Menu / Top
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Navigation	Green / APP / Repeat





Original	Replacement
Menu	Menu / Home
Return	Back / Return
I<<	I<< / Preset-
>>I	>>I / Preset+
<</Slow-	<< / Tune-
Play	Play / Slow
>>/Slow+	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Display	Display / Media
On Screen	Info / Angle
Recall	Fav / Marker / PC
→	Sound / Title
Rec	+  Shift + Rec / Rec Mode
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ

Original	Replacement
Angle/EE.Check	Red / Netflix / Search
EE	Guide / EPG / -/-
Dubbing	Picture / Format
Progressive Scan	Zoom / Size
Setup	Setup / OPT /





