









 

 
 





 






















 

 

 
 
 








 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/R	 TV/Radio /
 SAT	 Shift + 0
 SAT	 Smart / List
 EPG	 Guide / EPG / -/--
 Menu	 Menu / Home

Original	Replacement
 FAV	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Red / Audio	 Red / Netflix / Search
 Red / Audio	 Audio / Lang I/II
 Green / Mode	 Green / APP / Repeat
 Yellow / Disp	 Yellow / YouTube / Repeat
 Yellow / Disp	 Display / Media
 Blue	 Blue / Prime Video / Random





Original	Replacement
 Page+	 Shift + CH+ /
 Page-	 Shift + CH- /
 Recall	 Back / Return
 F1 /Info	 Info / Angle
 F1 /Info	 Shift + 1
 F2 / SUB	 Subtitle / EQ
 F2 / SUB	 Shift + 2
 F3 / Goto	 Shift + Text /
 F3 / Goto	 Shift + 3
 TXT	 Text / Goto
	 << / Tune-
	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
	 Play / Slow
	 Stop / Hold
	 AV / Input / RDS

Original	Replacement
	 Shift + 8
	 Pause / Step / Freeze
	 Rec / Rec Mode

