











 







 







 



 







































Original		Replacement		Original		Replacement	
	Power		Power		7		7
	Text		Text / Goto		8		8
	△		Setup / OPT /		9		9
	Help		Zoom / Size		Back		Back / Return
	Rec		Rec / Rec Mode		0		0
	D.Menu / Top		D.Menu / Top		Enter		Fav / Marker / PC
	Stop		Stop / Hold		Vol+		Vol+
	<<		<< / Tune-		Language		Audio / Lang I/II
	Play / Pause		Play / Slow		CH+		CH+ / Page+
	Play / Pause		Pause / Step / Freeze		Vol-		Vol-
	>>		>> / Tune+		Mute		Mute / Dimmer
	1		1		CH-		CH- / Page-
	2		2		Guide		Guide / EPG / -/--
	3		3		Up		Up
	4		4		Info		Info / Angle
	5		5		Left		Left
	6		6		OK		OK















 







 







 



 





































Original	Replacement
	Right
	Menu / Home
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Picture / Format
	TV/Radio /
	Display / Media

Original	Replacement





Original		Replacement		Original		Replacement	
	Power		Power		7		7
	Text		Text / Goto		8		8
	△		Setup / OPT /		9		9
	Help		Zoom / Size		Back		Back / Return
	Rec		Rec / Rec Mode		0		0
	D.Menu / Top		D.Menu / Top		Enter		Fav / Marker / PC
	Stop		Stop / Hold		Vol+		Vol+
	<<		<< / Tune-		Language		Audio / Lang I/II
	Play / Pause		Play / Slow		CH+		CH+ / Page+
	Play / Pause		Pause / Step / Freeze		Vol-		Vol-
	>>		>> / Tune+		Mute		Mute / Dimmer
	1		1		CH-		CH- / Page-
	2		2		Guide		Guide / EPG / -/--
	3		3		Up		Up
	4		4		Info		Info / Angle
	5		5		Left		Left
	6		6		OK		OK





Original	Replacement
	Right
	Menu / Home
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Picture / Format
	TV/Radio /
	Display / Media

Original	Replacement

