

 
 
 

 











 


 
 

 




 

 




 
 
 
 










 
 



 
 
 
 
 


 









Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Audio	 Dual
 FAV	 Pre Ch
 FAV+	 Shift + Ch +

Original	Replacement
 FAV-	 Shift + Ch -
 P.Mode	 Media
 S.Mode	 Options
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Input	 AV
 Sleep	 Sleep
 Aspect	 3D
 Info	 Info
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original		Replacement		Original		Replacement	
	OK		Ok		Yellow		Yellow
	Text		Text		Blue		Blue
	Index		Smart				
	Play/Mix/T		Play				
	Pause		Pause				
	Stop/Reveal		Stop				
	<</Hold		<<				
	>>/Subpage		>>				
	I<<		I<<				
	>>I/Cancel		>>I				
	Rec		Rec				
	Size		Format				
	EPG		Guide				
	Tv/Radio		TV/R				
	Sub-T		Subt				
	Red		Red				
	Green		Green				

