



















 






Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Recall	 Pre Ch
 Source	 AV
 Sound	 Shift + Dual
 Picture	 Format

Original	Replacement
 Audio 1/2	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Sleep	 Sleep
 CH+	 Ch +
 CH-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Index	 Back





	Original	Replacement		Original	Replacement
	Text		Text		
	List		List		
	Hold		Smart		
	Subtitle		Subt		
	Info		Info		
	Cancel		Exit		
	Reveal		TV/R		
	Zoom		Eject		

