










 

 

 









 




























 

 

 
 
 

 







| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  TV/R |  TV/Radio / |
|  SAT |  Shift + 0 |
|  SAT |  Smart / List |
|  EPG |  Guide / EPG / -/-- |
|  Menu |  Menu / Home |

| Original | Replacement |
|---|---|
|  FAV |  Fav / Marker / PC |
|  Exit |  Exit / Cancel / Clear |
|  Up / CH+ |  Up |
|  Up / CH+ |  CH+ / Page+ |
|  Down / CH- |  Down |
|  Down / CH- |  CH- / Page- |
|  Left / Vol- |  Left |
|  Left / Vol- |  Vol- |
|  OK |  OK |
|  Right / Vol+ |  Right |
|  Right / Vol+ |  Vol+ |
|  Red / Audio |  Red / Netflix / Search |
|  Red / Audio |  Audio / Lang I/II |
|  Green / Mode |  Green / APP / Repeat |
|  Yellow / Disp |  Yellow / YouTube / Repeat |
|  Yellow / Disp |  Display / Media |
|  Blue |  Blue / Prime Video / Random |





| Original | Replacement |
|------------|------------------|
| Page+ | Shift + CH+ / |
| Page- | Shift + CH- / |
| Recall | Back / Return |
| F1 /Info | Info / Angle |
| F1 /Info | Shift + 1 |
| F2 / SUB | Subtitle / EQ |
| F2 / SUB | Shift + 2 |
| F3 / Goto | Shift + Text / |
| F3 / Goto | Shift + 3 |
| TXT | Text / Goto |
| << | << / Tune- |
| >> | >> / Tune+ |
| << | << / Preset- |
| >> | >> / Preset+ |
| Play | Play / Slow |
| Stop / USB | Stop / Hold |
| Stop / USB | AV / Input / RDS |

| Original | Replacement |
|------------|-----------------------|
| Stop / USB | Shift + 8 |
| Pause | Pause / Step / Freeze |
| Rec | Rec / Rec Mode |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

