



Original	Replacement
Standby	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/-	Shift + Guide / EPG / -/-
Recall	Back / Return
Vol+	Vol+
I/II/Audio	Audio / Lang I/II
Auto	Smart / List

Original	Replacement
CH+	CH+ / Page+
Vol-	Vol-
Display	Display / Media
CH-	CH- / Page-
Up	Up
Left	Left
OK/Enter	OK
Right	Right
Menu	Menu / Home
Down	Down
Exit	Exit / Cancel / Clear
Source	AV / Input / RDS
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Play/Pause / Size	Zoom / Size
Play/Pause / Size	Play / Slow





Original	Replacement
Play/Pause / Size	Pause / Step / Freeze
Stop/Hold	Stop / Hold
Text	Text / Goto
Subtitle	Subtitle / EQ
<</Index	<< / Tune-
>>/Reveal	>> / Tune+
<</Subpage	<< / Preset-
>> /FAV	>>  / Preset+
>> /FAV	Fav / Marker / PC
Media	Shift + Display / Media
Rec	Rec / Rec Mode
EPG	Guide / EPG / -/--
Tv/Radio	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

