






 








 










 

 








Original	Replacement	Original	Replacement
 Power	 Power	 16:9	16:9
 Sleep	 Sleep	 Lang	Lang
 Mute	 Mute	 RCL	RCL
 Timer	 AV	 FAV	FAV
 EPI	 Guide	 Page+ / Timeshift	Shift + Ch +
 SUBTL	 Subt	 Page- / V-Format	Shift + Ch -
 Audio	 Shift + Dual	 Page- / V-Format	Shift + Format
 1	 1	 Up / CH+	Up
 2	 2	 Up / CH+	Ch +
 3	 3	 Down / CH-	Down
 4	 4	 Down / CH-	Ch -
 5	 5	 Right / Vol+	Right
 6	 6	 Right / Vol+	Vol +
 7	 7	 Left / Vol-	Left
 8	 8	 Left / Vol-	Vol -
 9	 9	 OK	Ok
 0	 0	 Menu	Menu

Original	Replacement	Original	Replacement
 Format	Format	 TV	DVD SAT AUX
 Dual	Dual	 ▶	REC MODE
 Back	Back	 ◀◀	▶▶
 Pre Ch	Pre Ch	 ◀	▶
 Shift + Ch +	Shift + Ch +	 LIST	AD SETTINGS
 Shift + Ch -	Shift + Ch -	 DUAL	SUBT OPT
 Shift + Format	Shift + Format	 SLEEP	TV/R PICTURE ECO
 Up	Up	 D.MENU	REPEAT ZOOM TIMER
 Ch +	Ch +	 MENU	DISPLAY INFO
 Down	Down	 OK	◀ ▶
 Ch -	Ch -	 CLEAR	RETURN BACK
 Right	Right	 +	HOME SMART
 Vol +	Vol +	 -	CH -
 Left	Left	 1 2 3	
 Vol -	Vol -	 4 5 6	
 Ok	Ok	 7 8 9	
 Menu	Menu	 0	FAV PRE-CH





Original		Replacement	
	Info		Info
	TXT		Text
	Exit		Exit
	Red / SAT		Red
	Green / Zoom		Green
	Green / Zoom		Eject
	Yellow / Pause		Yellow
	Yellow / Pause		Shift + Pause
	Blue / TV/Radio		Blue
	Blue / TV/Radio		TV/R
	<<		<<
	>>		>>
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I

Original		Replacement	
	Slow		Shift + Play
	Rec		Rec
	Media		Media
	Game		Smart
	PVR		Shift + Smart
	HDD		Shift + Media

