

 

 
 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Zoom	 Zoom / Size
 SUB	 Subtitle / EQ
 Timeshift	 Shift + Sleep / Timer
 USB	 Shift + 8
 TV/Radio	 TV/Radio /
 TXT	 Text / Goto
 PVRLIST	 Smart / List
 Sleep	 Sleep / Timer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 EPG	 Guide / EPG / -/-
 Down	 Down
 Info	 Info / Angle
 I<<	 I<< / Preset-
 Audio	 Audio / Lang I/II
 <<	 << / Tune-
 >>I	 >>I / Preset+
 SAT	 Shift + 0
 >>	 >> / Tune+
 1	 1





	Original	Replacement
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	FAV	 Fav / Marker / PC
	0	 0
	Recall	 Back / Return

	Original	Replacement

