



| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|--------|---|---------|---|--------------|
|  | Power |  | Power |  | 8 |  | 8 |
|  | TV/R |  | TV/R |  | 9 |  | 9 |
|  | Mute |  | Mute |  | 0 |  | 0 |
|  | Red / Audio |  | Red |  | SAT |  | Smart |
|  | Red / Audio |  | Dual |  | Sleep |  | Sleep |
|  | Green / Freeze |  | Green |  | Display |  | Shift + Info |
|  | Yellow / Zoom |  | Yellow |  | Mode |  | Options |
|  | Yellow / Zoom |  | Eject |  | Time |  | AV |
|  | Blue / Info |  | Blue |  | Recall |  | Pre Ch |
|  | Blue / Info |  | Info |  | Menu |  | Menu |
|  | 1 |  | 1 |  | Exit |  | Exit |
|  | 2 |  | 2 |  | Up |  | Up |
|  | 3 |  | 3 |  | Left |  | Left |
|  | 4 |  | 4 |  | OK |  | Ok |
|  | 5 |  | 5 |  | Right |  | Right |
|  | 6 |  | 6 |  | Down |  | Down |
|  | 7 |  | 7 |  | Vol+ |  | Vol + |





| | Original | Replacement | | Original | Replacement |
|---|----------|---|---|----------|---|
|  | Vol- |  Vol - |  | >> |  >> |
|  | CH+ |  Ch + |  | Play |  Play |
|  | CH- |  Ch - |  | Stop |  Stop |
|  | Back |  Back |  | I<< |  I<< |
|  | Page+ |  Shift + Ch + |  | >>I |  >>I |
|  | Page- |  Shift + Ch - |  | Pause |  Pause |
|  | FAV |  Shift + Pre Ch |  | Rec |  Rec |
|  | SUB |  Subt | | | |
|  | F1 |  Shift + 1 | | | |
|  | F2 |  Shift + 2 | | | |
|  | EPG |  Guide | | | |
|  | TXT |  Text | | | |
|  | Find |  Shift + TV/R | | | |
|  | Help |  Format | | | |
|  | # |  List | | | |
|  | USB |  Media | | | |
|  | << |  << | | | |

