 


 






 


 

 
 
 
 
 








Original	Replacement	Original	Replacement
 Standby	 Power	 NICAM	 Shift + Audio / Lang I/II
 Open/Close /	 Eject / Surround	 CH +	 CH+ / Page+
 MUTE	 Mute / Dimmer	 VOL -	 Vol-
 1	 1	 DISPLAY	 Display / Media
 2	 2	 CH -	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 LCD MENU	 Shift + Menu /
 8	 8	 Down	 Down
 9	 9	 EXIT	 Exit / Cancel / Clear
 -/--	 Shift + Guide / EPG / -/--	 INPUT	 AV / Input / RDS
 0	 0	 P.MODE	 Picture / Format
 RECALL	 Back / Return	 S.MODE	 Sound / Title
 VOL +	 Vol+	 SLEEP	 Sleep / Timer
 ASPECT	 Shift + Picture / Format	 FAV	 Fav / Marker / PC





Original	Replacement
FAV -	Shift + CH- /
FAV +	Shift + CH+ /
EPG	Guide / EPG / -/--
TEXT	Text / Goto
HOLD	Shift + Stop /
Subtitle	Subtitle / EQ
TV/RADIO	TV/Radio /
INDEX / D.DISP	Menu / Home
SIZE / ZOOM	Zoom / Size
REVEAL/ANGLE	Info / Angle
TITLE / Subpage	Shift + Sound / Title
D.MENU	D.Menu / Top
Audio	Audio / Lang I/II
Goto	Shift + Text /
Setup	Setup / OPT /
MEDIA	Shift + Display / Media
PLAY/PAUSE	Play / Slow

Original	Replacement
PLAY/PAUSE	Shift + Play /
<<	<< / Tune-
>>	>> / Tune+
REC	Rec / Rec Mode
STOP	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
RED / Prog	Red / Netflix / Search
GREEN / Intro	Green / APP / Repeat
YELLOW /	Yellow / YouTube / Repeat
YELLOW /	Shift + Yellow / YouTube /
BLUE / A-B	Blue / Prime Video / Random

