 


 



 
 

 



 
 
 
 


 
 



 





 




 

 

 
 



 
 
 
 


 

 

 
 




 










| Original   | Replacement  |
|--|--|
|  Standby/On Audio |  Power          |
|  1                |  1              |
|  2                |  2              |
|  3                |  3              |
|  4                |  4              |
|  5                |  5              |
|  6                |  6              |
|  7                |  7              |
|  8                |  8              |
|  9               |  9             |
|  0              |  0            |
|  10             |  Guide        |
|  +10/100+       |  Pre Ch       |
|  Sleep          |  Sleep        |
|  Play Mode      |  Shift + Play |
|  DSP Mode       |  3D           |
|  Up             |  Up           |

| Original   | Replacement   |
|--|---|
|  Down               |  Down    |
|  Right              |  Right   |
|  Left               |  Left    |
|  Enter              |  Ok      |
|  Vol+               |  Vol +   |
|  Vol-               |  Vol -   |
|  Setting            |  Options |
|  DVD Menu           |  Menu    |
|  Muting             |  Mute    |
|  Theater Position  |  Media  |
|  Tv/Video         |  TV/R  |
|  <</B.Search      |  <<    |
|  F.Search/>>      |  >>    |
|  I<</Rew/Tuning   |  I<<   |
|  Play             |  Play  |
|  Stop             |  Stop  |
|  Tuning Up/FF/>>I |  >>I   |









 

 
 
 
 
 

 

 
 
 

 


 
 

 
 






 

| Original   | Replacement   | Original   | Replacement   |
|--|---|--|---|
|  Pause/Strobe |  Pause           |  PTY-           |  Shift + Left    |
|  Channel+     |  Ch +            |  EON            |  Shift + Ok      |
|  Channel-     |  Ch -            |  RDS Display    |  Shift + Info    |
|  Subtitle     |  Subt            |  AUX            |  Format          |
|  Audio        |  Dual            |  FM/AM          |  Smart           |
|  Title        |  List            |  DVD            |  D. Menu         |
|  Decode       |  AV              |  1 AUX-FM/AM    |  Shift + 1       |
|  Zoom         |  Eject           |  2 AUX-FM/AM    |  Shift + 2       |
|  Return       |  Back            |  3 AUX-FM/AM    |  Shift + 3       |
|  Display      |  Info            |  4 AUX-FM/AM    |  Shift + 4       |
|  Digest      |  Text           |  5 AUX-FM/AM   |  Shift + 5      |
|  Angle      |  Red           |  6 AUX-FM/AM  |  Shift + 6     |
|  Choice     |  Yellow        |  7 AUX-FM/AM  |  Shift + 7     |
|  Time       |  Shift + AV    |  8 AUX-FM/AM  |  Shift + 8     |
|  EON Select |  Shift + Up    |  9 AUX-FM/AM  |  Shift + 9     |
|  PTY Search |  Shift + Down  |  0/FM Mode    |  Shift + 0     |
|  PTY+       |  Shift + Right |  10 AUX-FM/AM |  Shift + Guide |











 
 
 




 


 

 

 
 
 
 





 

 
 
 








| Original  | Replacement  |
|---|--|
|  Standby/On Tv |  Power    |
|  1             |  1        |
|  2             |  2        |
|  3             |  3        |
|  4             |  4        |
|  5             |  5        |
|  6             |  6        |
|  7             |  7        |
|  8             |  8        |
|  9            |  9       |
|  0           |  0      |
|  10          |  Guide  |
|  +10/+100    |  Pre Ch |
|  Tv Return   |  Back   |
|  Tv Vol+     |  Vol +  |
|  Tv Vol-     |  Vol -  |
|  Channel+    |  Ch +   |

| Original   | Replacement  |
|--|--|
|  Channel- |  Ch - |





|   | Original   | Replacement   |  | Original  | Replacement |
|---|------------|---|--|---|-------------|
|    | Standby/On |    |  |  | Pause       |
|    | 1          |    |  |  | Rec         |
|    | 2          |    |  |   |             |
|    | 3          |    |  |   |             |
|    | 4          |    |  |   |             |
|    | 5          |    |  |   |             |
|    | 6          |    |  |   |             |
|    | 7          |    |  |   |             |
|    | 8          |    |  |   |             |
|   | 9          |   |  |   |             |
|  | 0          |  |  |   |             |
|  | Channel+   |  |  |   |             |
|  | Channel-   |  |  |   |             |
|  | Play       |  |  |   |             |
|  | <</Rew     |  |  |   |             |
|  | FF/>>      |  |  |   |             |
|  | Stop       |  |  |   |             |

