







 






















 











Original	Replacement
 TV Mute	 Mute / Dimmer
 Output Select	 Smart / List
 Tv/Video	 AV / Input / RDS
 Standby/On	 Power
 DV	 Text / Goto
 HDD	 Shift + 7
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 Tv Vol+	 Vol+
 Tv Vol-	 Vol-
 PR/CH Input	 CH+ / Page+
 PR/CH Input	 CH- / Page-
 Cancel	 Exit / Cancel / Clear
 Memo/Mark	 Eject / Surround
 F1	 Yellow / YouTube / Repeat
 F2	 Blue / Prime Video / Random
 Edit	 Sleep / Timer
 Prog	 TV/Radio /
 Top Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 OK
 Navigation	 Green / APP / Repeat
































Original	Replacement
 Menu	 Menu / Home
 Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <</Slow-	 << / Tune-
 Play	 Play / Slow
 >>/Slow+	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Display	 Display / Media
 On Screen	 Info / Angle
 Recall	 Fav / Marker / PC
 →	 Sound / Title
 Rec	 +  Shift + Rec / Rec Mode
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ





Original	Replacement
 Angle/EE.Check	 Red / Netflix / Search
 EE	 Guide / EPG / -/--
 Dubbing	 Picture / Format
 Progressive Scan	 Zoom / Size
 Setup	 Setup / OPT /







Original	Replacement
	 Power
	 Mute / Dimmer
	 TV/Radio /
	 AV / Input / RDS
	 Exit / Cancel / Clear
	 Smart / List
	 CH+ / Page+
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Replacement
 0	 0
 F1	 Guide / EPG / -/-

