






 
 

 



 


 

























 



 










	Original	Replacement		Original	Replacement
	Power		Power		Listen Mode
	Open/Close		Eject		Guide
	CD/DVD		Red		Subt
	Tuner/Bnad		Green		Back
	Video 1/2		Yellow		Options
	1		1		Info
	2		2		Menu
	3		3		Top Menu
	4		4		Shift + Menu
	5		5		Up
	6		6		Down
	7		7		Right
	8		8		Left
	9		9		Enter
	0		0		Ok
	Sleep		Sleep		Preset Up
	Audio		Dual		Preset Down
					Vol+
					Vol-
					Mute



