

 
 


 
 




 
 




 
 



 


 
 






 
 
 

 


Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Off	 Exit
Update	 Smart	Menu Down	 Down
Reveal	 Media	Back	 Back
Txt Stop	 Stop	Volume+	 Vol +
Info	 Info	Chan.Up	 Ch +
Subt.List	 Subt	Menu audio	 Dual
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Shift + Info	6	 6
Menu Left	 Left	7	 7
OK Enter	 Ok	8	 8



Original	Replacement	Original	Replacement
9	 9		
Guide -/-- 1.	 Guide		
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Mix Scan	 D. Menu		
Aft/Caf	 Options		
Nicam/Mono	 List		
Red	 Red		
Green	 Green		
Color- S.Std	 +  Shift + Dual		
Yellow	 Yellow		
Blue	 Blue		
Color+ P.Std	 Format		
Disp	 3D		

