



Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol +
 TV / RAD	 TV/R	 Vol -	 Vol -
 Energy Saving	 3D	 Mark / Fav	 Pre Ch
 AV Mode	 Shift + AV	 Mute	 Mute
 Input	 AV	 P + / Page +	 Ch +
 1	 1	 P - / Page -	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Ratio	 Format
 4	 4	 Q.Menu	 D. Menu
 5	 5	 Up	 Up
 6	 6	 Right	 Right
 7	 7	 Down	 Down
 8	 8	 Left	 Left
 9	 9	 OK	 Ok
 0	 0	 Guide	 Guide
 List	 List	 Info	 Info
 Q.View	 Media	 Return / Exit	 Exit





Original	Replacement	Original	Replacement
 Return / Exit	 Back		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Text	 Text		
 T.Opt	 Options		
 Subtitle	 Subt		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 <<	 I<<		
 >>	 >>I		
 Simplink	 Smart		

