 

 












 

 
 
 

 



 


 
 






 


 


 

 






 
 


Original	Replacement
 Power	 Power
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 TV	 TV/R
 Recall	 Pre Ch
 World	 Media
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 i/Info	 Info
 Guide	 Guide
 [≡]/Text	 Text
 */O	 Format
 */O..	 3D
 Lang	 Dual
 [≡]..	 Subt
 [-O-]	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow





	Original	Replacement		Original	Replacement
	Blue	 D	Blue		
	Rec	 REC MODE	Rec		
	Play	 PLAY MODE	Play		
	Stop		Stop		
	Pause		Pause		
	<<		<<		
	>>		>>		
	OK		Ok		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	Music/Photo/Movi	 HOME SMART	Smart		
	Q.Menu	 E-MANUAL D.MENU	D. Menu		

