







 










 















 


































	Original	Replacement	Original	Replacement			
	Standby		Power		D.Menu/Index		D.Menu / Top
	Mute		Mute / Dimmer		Goto/Subpage		Text / Goto
	Play		Play / Slow		Source		AV / Input / RDS
	Pause		Pause / Step / Freeze		Menu		Menu / Home
	Stop		Stop / Hold		Up		Up
	Rec		Rec / Rec Mode		Angle/Text		Info / Angle
	<<		<< / Tune-		Left		Left
	>>		>> / Tune+		OK		OK
	I<<		I<< / Preset-		Right		Right
	>>I		>>I / Preset+		Exit		Exit / Cancel / Clear
	S.Mode		Sound / Title		Down		Down
	Audio/Tv/Radio		Audio / Lang I/II		Recall		Back / Return
	Subtitle		Subtitle / EQ		Vol+		Vol+
	Eject/Auto		Eject / Surround		CH+		CH+ / Page+
	P.Mode		Picture / Format		Vol-		Vol-
	Zoom/Hold		Zoom / Size		Display		Display / Media
	Sleep		Sleep / Timer		CH-		CH- / Page-





Original	Replacement
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
EPG	Guide / EPG / -/--
0	0
FAV	Fav / Marker / PC
Red / Del / Prog	Red / Netflix / Search
Green / Rename	Green / APP / Repeat
Yellow / Move / Repeat	Yellow / YouTube / Repeat
Blue / Skip / A-B	Blue / Prime Video / Random
I>/Lang	Shift + >>1 / Preset+

Original	Replacement
Nicam	Shift + Sound / Title
Audio/Tv/Radio	Shift + Audio / Lang I/II
Aspect	Shift + Picture / Format
Title/Size	Shift + Zoom /
D.Disp/Reveal	Shift + D.Menu / Top Menu
I>/Lang	Shift + Right
DVD Setup	Shift + 2
FAV+	Shift + 9
-/--	Shift + Guide / EPG / -/--
FAV-	Shift + Fav / Marker / PC

