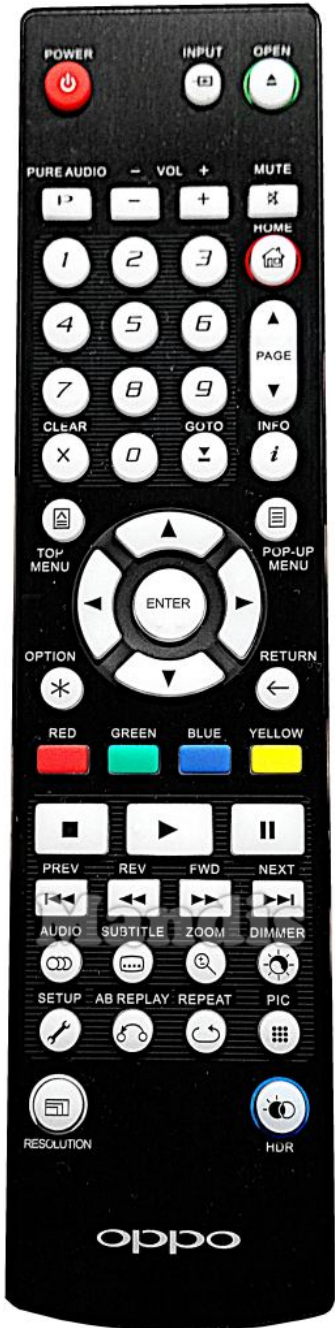






































 

Original	Replacement
Power	Power
Input	AV / Input / RDS
Open	Eject / Surround
Pure Audio	Sound / Title
Vol-	Vol-
Vol+	Vol+
Mute	Mute / Dimmer
1	1
2	2
3	3
Home	Menu / Home
4	4
5	5
6	6
Page+	CH+ / Page+
7	7
8	8

Original	Replacement
9	9
Page-	CH- / Page-
Clear	Exit / Cancel / Clear
0	0
Goto	Text / Goto
Info	Info / Angle
Top Menu	D.Menu / Top
Up	Up
Pop-Up Menu	Shift + Menu /
Left	Left
Enter	OK
Right	Right
Option	Shift + Setup / OPT / Tools
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Original	Replacement
 Blue	 Blue / Prime Video / Random
 Yellow	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Dimmer	 Shift + Mute / Dimmer
 Setup	 Setup / OPT /
 AB Replay	 Shift + YouTube / Repeat
 Repeat	 Shift + Green / APP / Repeat
 Pic	 Picture / Format

Original	Replacement
 Resolution	 Guide / EPG / -/-
 Light	 Fav / Marker / PC

